



Instructions for installation of stabilizing units for Airstream Trailers:

Read instruction sheet and utilizing diagram determine approximate position for installation of jacks under trailer.


Then follow the ten steps as pictured on this sheet.

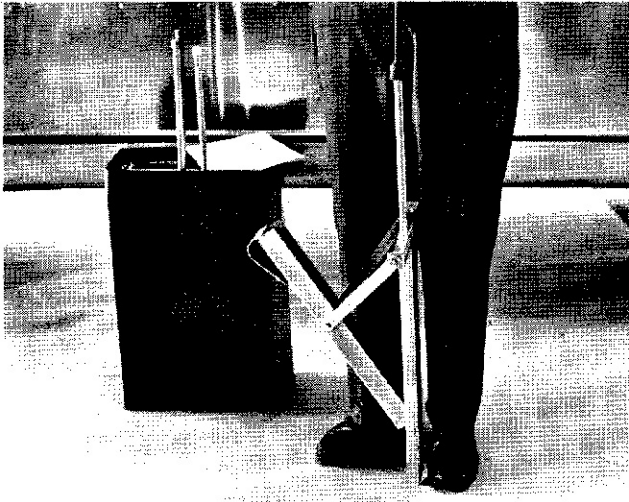


STEP 1 — Open jacks to approximate installation height.

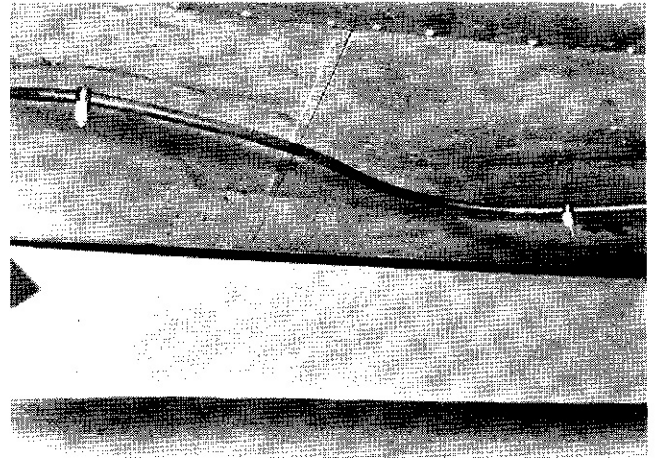


STEP 2 — In the event of a gas line, remove hangers — do not disconnect gas line.

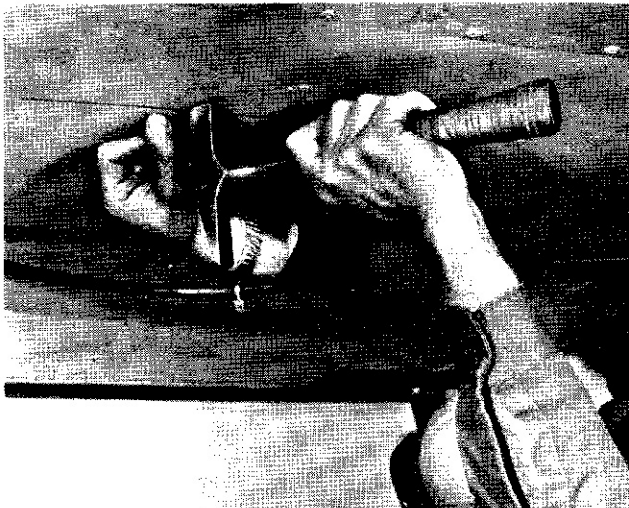


STEP 3 — Locate outside edge of frame by sighting from wheel well or step cutout. A few light taps will locate outer edge of frame as indicated by line on photograph.

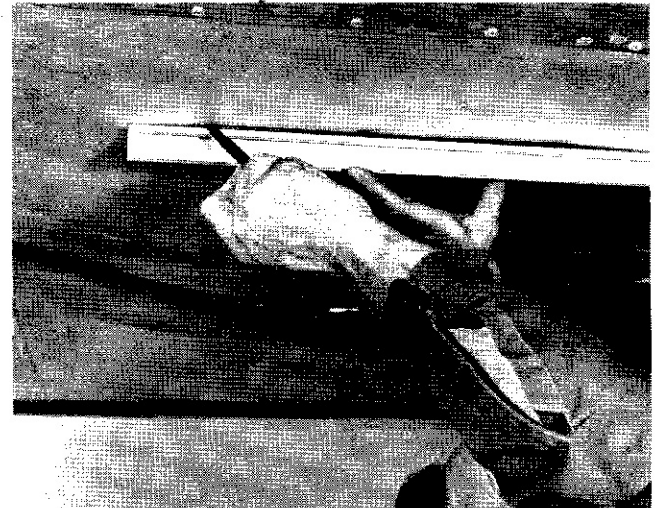

STEP 4 — Draw line parallel to frame under skin.

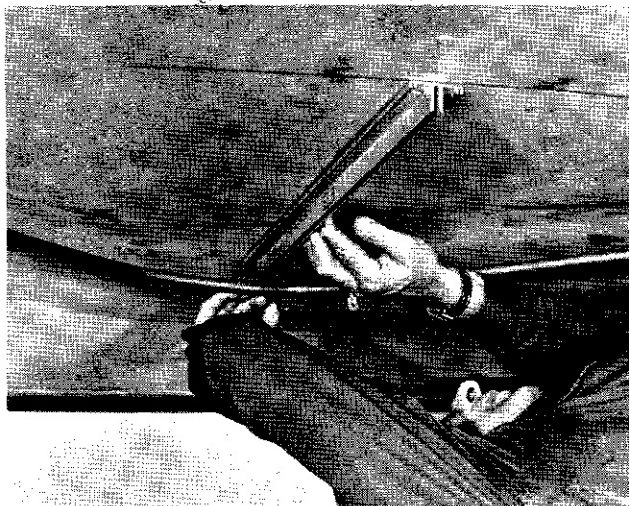

STEP 5 — Measure along rivets at crossmember see BB

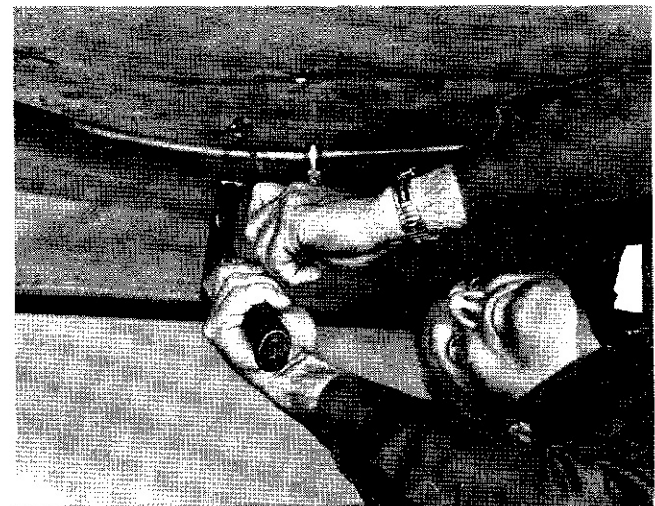

STEP 6 — Cut 1" x 1/4" slot on forward side starting at 22" and continuing 22" — Face in to left.