






STEP 7 — Insert J-bolt, twist ¼ turn — hook over cutout in crossmember (see section A-A). Hold down on threaded end insert plastic retainer snug against trailer.

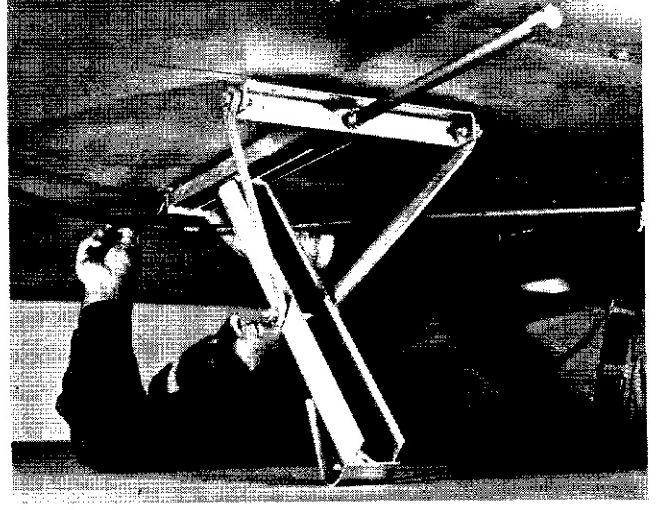


STEP 8 — Use opened leg to help support weight of jack — position jack.

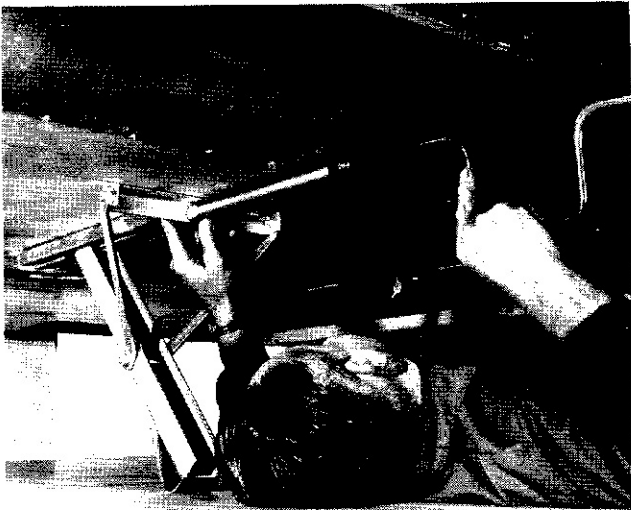


STEP 9 — Align front of jack parallel to frame — Turn jack down till snug on the ground.

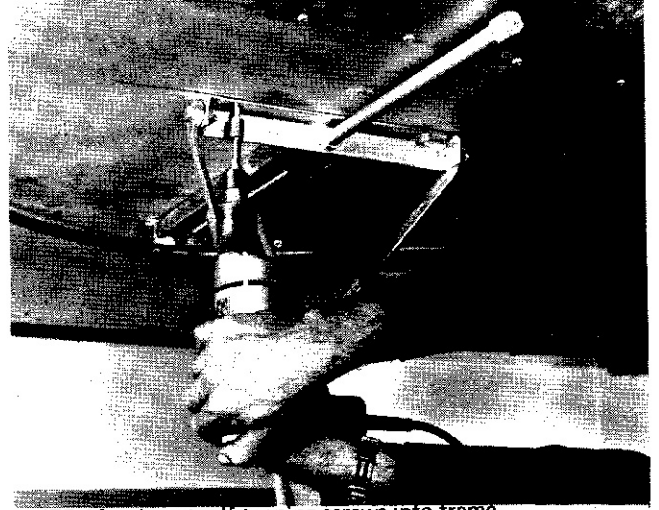

STEP 10 — Insert self-tapping screws into frame.

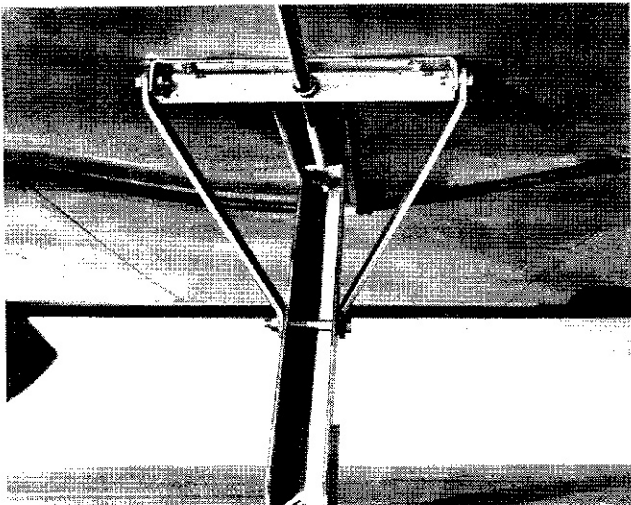

GAS LINE MOVED TO REAR

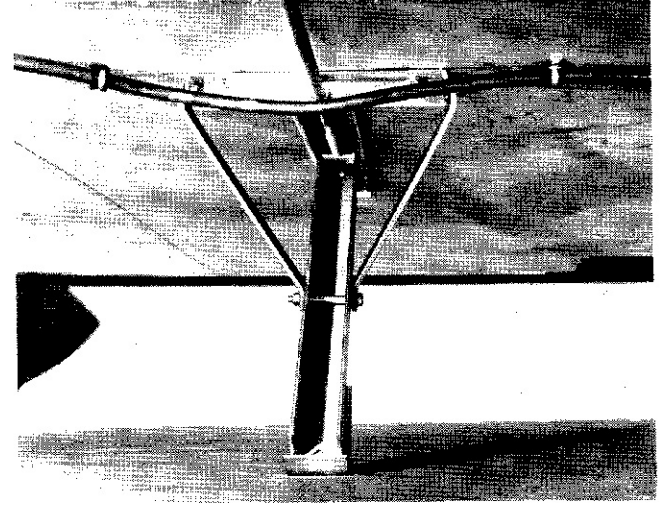

GAS LINE IN FRONT